



PRODUCT GUIDE



KFRA.it
AUTOMOTIVE COMPONENTS

October 2022

SPRINTER | TRANSIT | DAILY | CRAFTER | MERCEDES | FORD | IVECO | VW

14"

WAM 07 - COMPLETE SET - INCLUDING FITTINGS

WAM Euroliners

WAM JM 03

WAM JM 01

WAM TE 02

WAM JM 04

WAM TE 01

WAM JM 02



WAM TOL 01



WAM 07 RL 14"

WAM 07 FL 14"

SET	SIZE	STUDS	PCD
WAM07	14"	6	170mm
LDV Convoy / DAF 400 / Early Ford Transit			

- 2x WAM07 FL (WAM Euroliner Front)
- 2x WAM07 RL (WAM Euroliner Rear)
- 2x WAMJM01 (Jam Nut & Cap – Right Hand Rear)
- 2x WAMJM02 (Jam Nut & Cap – Left Hand Rear)
- 2x WAMJM03 (Jam Nut & Cap – Right Hand Front)
- 2x WAMJM04 (Jam Nut & Cap – Left Hand Front)
- 2x WAMTE01 (Tube Extender – Left Hand Rear)
- 2x WAMTE02 (Tube Extender – Right Hand Rear)
- 1x WAMTOL01 (Fitting Tool)
- 4x WAM Logo1

* EARLY FORD TRANSIT SET AVAILABLE

AVAILABLE INDIVIDUALLY - FOR SPARE PARTS

WAM 04 A - COMPLETE SET - INCLUDING FITTINGS

15"

WAM Euroliners



SET	SIZE	STUDS	PCD
2700450	15"	6	205mm
Mercedes Sprinter - 408 / 410 / 411 / 412 / 413 / 416 / Volkswagen LT46			

- 2x WAM04 A FL (WAM Euroliner Front) = 2700463
- 2x WAM04 A RL (WAM Euroliner Rear) = 2700464
- 4x WAMJM0425 (Jam Nut & Cap – Front) = 2700424
- 4x WAMJM01 (Jam Nut & Cap – Rear) = 2700492
- 4x WAMTE03 (Tube Extender – Rear) = 2700482
- 1x WAMTOL02 (Fitting Tool)
- 4x WAM Logo1

AVAILABLE INDIVIDUALLY - FOR SPARE PARTS



2700424



2700491



WAM TE 03



WAM TOL 02

16"

WAM 03A - COMPLETE SET - INCLUDING FITTINGS

WAM Euroliners



2700425



2700491



2700429



2700420



WAM TOL 02



*

2700482



SET	SIZE	STUDS	PCD
2700452	16"	6	205mm
Mercedes Sprinter / Vario - 609 / 612 / 613 / 614 / 615 / 616 / 709 / 905			

- 2x WAM03 A FL (WAM Euroliner Front) = **2700452A**
- 2x WAM03 A RL (WAM Euroliner Rear) = **2700452P**
- 4x WAMJM0125 (Jam Nut & Cap – Front) = **2700491**
- 4x WAMJM01 (Jam Nut & Cap – Rear) = **2700429**
- 4x WAMN004 (Shallow Nut – Rear) = **2700420**
- 8x WAMSE01 (Stud Extender)
- 1x WAMTOL01 (Fitting Tool) = **2700423**
- 4x WAM Logo1

* MERCEDES 609 SET AVAILABLE

AVAILABLE INDIVIDUALLY - FOR SPARE PARTS

609

WAM 35 - COMPLETE SET - INCLUDING FITTINGS

16"

WAM Euroliners



2700425



2700492



WAM BK 35 F



WAM BK 35 R

SET	SIZE	STUDS	PCD
2700469	16"	6	180mm
Ford Transit (Mark 6) 2003 - 2006			

- 2x WAM35 FL (WAM Euroliner – Front) = 2700469A
- 2x WAM35 RL (WAM Euroliner – Rear)= 2700469P
- 4x WAMJM0125 (Jam Nut & Cap – Front) = 2700425
- 4x WAMJM01 (Jam Nut & Cap – Rear) = 2700492
- 4x WAMBK35F (Bracket – 7mm – Front) = 2700443
- 4x WAMBK35R (Bracket – 12mm – Rear)
- 1x WAMTOL01 (Fitting Tool)
- 4x WAM Logo1

AVAILABLE INDIVIDUALLY - FOR SPARE PARTS



WAM TOL 01

16"

WAM 35 A - COMPLETE SET - INCLUDING FITTINGS

WAM Euroliners



2700412



WAM TOL 05



WAM JM 13



WAM TOL 01



SET	SIZE	STUDS	PCD
2700470	16"	6	180mm
Ford Transit (Mark 7) 2006 - 2014			

- 2x WAM35A FL (WAM Euroliner – Front) = 2700470A
- 2x WAM35A RL (WAM Euroliner – Rear) = 2700470P
- 4x WAMJM14 (Nut Cap – Front) = 2700412
- 4x WAMJM13 (Jam Nut & Cap – Rear)
- 1x WAMTOL05 (Fitting Tool)
- 1x WAMTOL01 (Fitting Tool)
- 4x WAM Logo1

AVAILABLE INDIVIDUALLY - FOR SPARE PARTS

WAM 350 - COMPLETE SET - INCLUDING FITTINGS

16"



WAM 350 RL 16"



WAM 350 FL 16"



WAM JM350-LNF-F



WAM JM13



WAM TOL05



WAM TOL01

SET	SIZE	STUDS	PCD
2700415	16"	6	180
Ford Transit (Mark 8) 2014 >			

- 2x WAM350 FL (WAM Euroliner – Front) 2700415A
- 2x WAM350 RL (WAM Euroliner – Rear) 2700415P
- 4x WAMJM350-LNF-F (Nut Cap – Front)
- 4x WAMJM13 (Jam Nut & Cap – Rear)
- 1x WAMTOL05 (Fitting Tool)
- 1x WAMTOL01 (Fitting Tool)
- 4x WAM Logo1

AVAILABLE INDIVIDUALLY - FOR SPARE PARTS

16"

WAM 05 LNF - COMPLETE SET - INCLUDING FITTINGS

WAM Euroliners



2700439



2700440



WAM TOL 05

SET	SIZE	STUDS	PCD
2700467	16"	6	205mm
Mercedes Sprinter (2006-2012) - 511 / 513 / 514 / 515 / 516 / 517 / 518 / 519 / 906 / Volkswagen Crafter 2E / 2F			

- 2x WAM05LNF FL (WAM Euroliner Front) = **2700467A**
- 2x WAM05LNF RL (WAM Euroliner Rear) = **2700467P**
- 4x WAM05-LNF-F (Nut Cap – Front) = **2700439**
- 4x WAM05-LNF-R (Nut Cap – Rear) = **2700440**
- 1x WAMTOL05 (Fitting Tool)
- 4x WAM Logo1

AVAILABLE INDIVIDUALLY - FOR SPARE PARTS

WAM 05 LNF-18 - COMPLETE SET - INCLUDING FITTINGS

16"

WAM Euroliners



SET	SIZE	STUDS	PCD
2700413	16"	6	205mm
Mercedes Sprinter (2011 - onwards) - 511 / 513 / 514 / 515 / 516 / 517 / 518 / 519 / 906 / Volkswagen Crafter 2E / 2F / M.A.N TGE			

- 2x WAM05LNF-18 FL (WAM Euroliner Front)
- 2x WAM05LNF-18 RL (WAM Euroliner Rear)
- 4x WAM05-LNF-18-F (Nut Cap – Front)
- 4x WAM05-LNF-18-R (Nut Cap – Rear)
- 1x WAMTOL05 (Fitting Tool)
- 4x WAM Logo1

AVAILABLE INDIVIDUALLY - FOR SPARE PARTS



WAM JM 05-LNF-F



WAM JM 05-LNF-R



WAM TOL 05

16"

WAM 08 - COMPLETE SET - INCLUDING FITTINGS



WAM JM 06



WAM N003



WAM N002



WAM BK 24



WAM TE 12



WAM N009



WAM N010



WAM BK 25



WAM TE 11



WAM TOL 04



WAM 08 RL 16"

WAM 08 FL 16"

SET	SIZE	STUDS	PCD
WAM08	16"	6	222.5mm
Isuzu NPR			

- 2x WAM08 FL (WAM Euroliner – Front)
- 2x WAM08 RL (WAM Euroliner – Rear)
- 2x WAMBK24 (Bracket – Right Hand Front)
- 4x WAMN003 (Full Nut – Right Hand Front)
- 4x WAMN002 (Half Nut – Right Hand Front)
- 4x WAMN009 (Half Nut – Left Hand Front)
- 2x WAMBK25 (Bracket – Left Hand Front)
- 4x WAMN010 (Full Nut – Left Hand Front)
- 2x WAMTE12 (Tube Extender – Right Hand Rear)
- 2x WAMTE11 (Tube Extender – Left Hand Rear)
- 8x WAMJM06 (Jam Nut Cap)
- 1x WAMTOL04 (Fitting Tool)
- 4x WAM Logo2

AVAILABLE INDIVIDUALLY - FOR SPARE PARTS

WAM 09 - COMPLETE SET - INCLUDING FITTINGS

17.5"



WAM 09 FL 17.5"

WAM 09 RL 17.5"

SET	SIZE	STUDS	PCD
WAM09	17.5"	6	222.5mm
Isuzu NQR			

- 2x WAM09 FL
(WAM Euroliner – Front)
- 2x WAM09 RL
(WAM Euroliner – Rear)
- 2x WAMBK24
(Bracket – Right Hand Front)
- 4x WAMN003
(Full Nut – Right Hand Front)
- 4x WAMN002
(Half Nut – Right Hand Front)
- 4x WAMN009
(Half Nut – Left Hand Front)
- 2x WAMBK25
(Bracket – Left Hand Front)

- 4x WAMN010
(Full Nut – Left Hand Front)
- 2x WAMTE12
(Tube Extender – Right Hand Rear)
- 2x WAMTE11
(Tube Extender – Left Hand Rear)
- 8x WAMJM06 (Jam Nut Cap)
- 1x WAMTOL03 (Fitting Tool)
- 4x WAM Logo2

AVAILABLE INDIVIDUALLY - FOR
SPARE PARTS



WAM JM 06



WAM N003



WAM N002



WAM BK 24



WAM TE 12



WAM N009



WAM N010



WAM BK 25



WAM TE 11



WAM TOL 04

16"

WAM 20 - COMPLETE SET - INCLUDING FITTINGS

WAM Euroliners



2700436



2700494



WAM SP 20



2700437



2700493



WAM TOL 06

SET	SIZE	STUDS	PCD
2700448	16"	6	170mm
Iveco Daily - 35 C / 35C-10 / 35C-11 / 35C-12 / 35C-13 / 35C-14 - / 35C-15 / 35C-17 / 35C-18 / 35C-40 / 40C / 45C / 50C / 50C-15 / 50C-17			

- 2x WAM20 FL (WAM Euroliner – Front) = **2700448A**
- 2x WAM20 RL (WAM Euroliner – Rear) = **2700448P**
- 2x WAM20FLC (WAM Euroliner Center Cap – Front)
- 2x WAM20RLC (WAM Euroliner Center Cap – Rear)
- 8x WAMCOMP20 (Cap Retaining Screw)
- WAMSP20 (Spacer Nut)
- 4x WAMN001 (Half Nut – Front) = **2700494**
- 4x WAMSE04 (Stud Extender – Rear) = **2700493**
- 4x WAMBK20 (Bracket) = **2700437**
- 1x WAMTOL06 (Fitting Tool)
- 4x WAM Logo1

AVAILABLE INDIVIDUALLY - FOR SPARE PARTS

WAM 20 A - COMPLETE SET - INCLUDING FITTINGS

16"

WAM Euroliners



2700436



2700494



WAM SP 20



2700437



2700493



WAM TOL 06

SET	SIZE	STUDS	PCD
2700447	16"	6	170mm
Iveco Daily - 35 C / 35C-10 / 35C-11 / 35C-12 / 35C-13 / 35C-14 - / 35C-15 / 35C-17 / 35C-18 / 35C-40 / 40C / 45C / 50C / 50C-15 / 50C-17			

- 2x WAM20A FL (WAM Euroliner – Front) = 2700447A
- 2x WAM20A RL (WAM Euroliner – Rear) = 2700447P
- 2x WAM20AFLC (WAM Euroliner Center Cap – Front)
- 2x WAM20ARLC (WAM Euroliner Center Cap – Rear)
- 8x WAMCOMP20 (Cap Retaining Screw)
- WAMSP20 (Spacer Nut)
- 4x WAMN001 (Half Nut – Front) = 2700494
- 4x WAMSE04 (Stud Extender – Rear) = 2700493
- 4x WAMBK20 (Bracket) = 2700437
- 1x WAMTOL06 (Fitting Tool)
- 4x WAM Logo1

AVAILABLE INDIVIDUALLY - FOR SPARE PARTS

16"

WAM 360 - COMPLETE SET - INCLUDING FITTINGS

WAM Euroliners



2700492



2700493



WAM TOL05



WAM TOL01

SET	SIZE	STUDS	PCD
2700411	16"	6	200mm
Nissan NV400 / NT400 / Renault Master / Vauxhall Movano			

- 2x WAM360 FL (WAM Euroliner – Front)
- 2x WAM360 RL (WAM Euroliner – Rear)
- 8x WAMJM 01 (Jam Nut & Cap) = 2700492
- 8x WAMSE 04 (Jam Nut & Cap) = 2700493
- 1x WAMTOL05 (Fitting Tool)
- 1x WAMTOL01 (Fitting Tool)
- 4x WAM Logo1

AVAILABLE INDIVIDUALLY - FOR SPARE PARTS

WAM 30 B - COMPLETE SET - INCLUDING FITTINGS

16"

WAM Euroliners



2700425



2700492



2700441



WAM TOL 01

SET	SIZE	STUDS	PCD
2700498	16"	6	205mm
Iveco Daily - 59-12 / 60 Range / 65 Range / 60C-15 / 65C-15 / 65C-17 / 65C-18 / 65C+ / 70 Range / 70C-12 / 70C-13 / 70C - 14 / 70C-15 / 70C-17 / 70C-18 / 72C-16 / 72C-17 / 72C-18 / Iveco - Eurocargo 75E			

- 2x WAM30B FL (WAM Euroliner – Front) = 2700465
- 2x WAM30B RL (WAM Euroliner – Rear) = 2700466
- 4x WAMJM0125 (Jam Nut & Cap – Front) = 2700425
- 4x WAMJM01 (Jam Nut & Cap – Rear) = 2700492
- 8x WAMBK36 (Bracket – Front) = 2700441
- 1x WAMTOL01 (Fitting Tool)
- 4x WAM Logo1

For replacement brackets check the height (WAMBK36 or WAMBK36L)

AVAILABLE INDIVIDUALLY - FOR SPARE PARTS

16"**WAM 300 - COMPLETE SET - INCLUDING FITTINGS**

WAM 300 RL 16"

WAM 300 FL 16"



WAM JM 300



WAM TOL 05



WAM JM 01



WAM BK 36

2700441

WAM TOL 01

SET	SIZE	STUDS	PCD
2700445	16"	6	205mm
Iveco Daily - 59-12 / 60 Range / 65 Range / 60C-15 / 65C-15 / 65C-17 / 65C-18 / 65C+ / 70 Range / 70C-12 / 70C-13 / 70C-14 / 70C-15 / 70C-17 / 70C-18 / 72C-16 / 72C-17 / 72C-18 / Iveco - Eurocargo 75E			

- 2x WAM300 FL (Euroliner - Front)
- 2x WAM300RL (Euroliner - Rear)
- VAMJM300 (Nut Cap - Front) **2700444**
- 4x WAMJM01 (Jam Nut & Cap - Rear) **2700492**
- 1x WAMTOL05 (Fitting Tool - Front)
- 1x WAMTOL01 (Fitting Tool - Rear)
- 4x Euroliner Logo1

AVAILABLE INDIVIDUALLY - FOR SPARE PARTS

16"

WAM 19 A - COMPLETE SET - INCLUDING FITTINGS

WAM Euroliners

WAM 19 A RL 16"



WAM 19 A FL 16"



2700425



2700492



WAM BK 19A



WAM BK 19 D



WAM TOL 01

SET	SIZE	STUDS	PCD
2700485	16"	6	170mm
Iveco Daily - 35C / 35C-10 / 35C-11 / 35C-12 / 35C-13 / 35C-14 - / 35C-15 / 35C-17 / 35C-18 / 35C-40 / 40C / 45C / 50C / 50C-17			

- 2x WAM19A FL (WAM Euroliner – Front)
- 2x WAM19A RL (WAM Euroliner – Rear)
- 4x WAMJM0125 (Jam Nut & Cap – Front)
- 4x WAMJM01 (Jam Nut & Cap – Rear)
- 8x WAM BK19A (Bracket)
- 1x WAMTOL01 (Fitting Tool)
- 4x WAM Logo1

AVAILABLE INDIVIDUALLY - FOR SPARE PARTS

WAM 01 B - COMPLETE SET - INCLUDING FITTINGS

17.5"

WAM Euroliners



2700425



2700492



2700441



WAM TOL 01

SET	SIZE	STUDS	PCD
2700451	17.5"	6	205mm
Mercedes Sprinter / Vario - 711 / 811 / 812 / 813 / 814 / 815 / 816 / 817 / 900 / DAF 45			

- 2x WAM01B FL (WAM Euroliner – Front) = **2700457**
- 2x WAM01B RL (WAM Euroliner – Rear) = **2700456**
- 4x WAMJM0125 (Jam Nut & Cap – Front) = **2700425**
- 4x WAMJM01 (Jam Nut & Cap – Rear) = **2700492**
- 8x WAMBK36 (Bracket) = **2700441**
- 1x WAMTOL01 (Fitting Tool)
- 4x WAM Logo1

AVAILABLE INDIVIDUALLY - FOR SPARE PARTS

17.5"

WAM 21 B (M.B) - COMPLETE SET - INCLUDING FITTINGS

WAM Euroliners



2700425



2700492



2700434



2700496

**PROFONDITA' DISCO POST.195 mm**

2700494



WAM TOL 01



SET	SIZE	STUDS	PCD
2700460 (MERCEDES)	17.5"	6	245mm
Mercedes Atego - 815 / 816 / 817 / 818 / 822 / 823 / 921L / 1018 / 1022 / 1023 / 1024 / 1218L / 1222			

- 2x WAM21B FL (WAM Euroliner – Front) = 2700471A
- 2x WAM21B RL (disco post.prof.195mm – Rear 195 mm depth) = 2700454P
- 4x WAMJM0125 (Jam Nut & Cap – Front) = 2700425
- 4x WAMJM01 (Jam Nut & Cap – Rear) = 2700492
- 4x WAMN001 (Rear Half Nut) = 2700494
- 8x WAMBK16 (Bracket) = 2700434
- 1x WAMTOL01 (Fitting Tool)
- 4x WAM Logo2
- 1x WAMTOL01 (Fitting Tool)
- 4x WAM Logo1

AVAILABLE INDIVIDUALLY - FOR SPARE PARTS

SET	SIZE	STUDS	PCD
2700454	17.5"	8	275mm
Iveco 100E15 Iveco 80E21/85E21			

WAM 22 B (M.A.N) - COMPLETE SET - INCLUDING FITTINGS

17.5"



WAM Euroliners



2700425



2700492



2700494



2700491



2700496



2700434



WAM TOL 01

PROFONDITA' DISCO POST.165 mm

SET	SIZE	STUDS	PCD
2700471 (M.A.N)	17.5"	6	245mm
Iveco Eurocargo - 75E16 / M.A.N. - 8.153 / 8.163 / 8.210 / 8.225 / L2000 / LE160 / 890			

- 2x WAM22B FL (WAM Euroliner – Front) = 2700471A
- 2x WAM22B RL disco post/rear cover (prof./depth165 mm) = 2700471P
- 4x WAMJM0125 (Jam Nut & Cap – Front) = 2700425
- 4x WAMJM01 (Jam Nut & Cap – Rear) = 2700492
- 4x WAMSE05 (Stud Extender) = 2700491
- 4x WAMSE07 (Tube Extender – Rear) = 2700496
- 8x WAMBK16 (Bracket) = 2700434
- 1x WAMTOL02 (Fitting Tool)
- 4x WAM Logo2

AVAILABLE INDIVIDUALLY - FOR SPARE PARTS

SET	INFO	SIZE	STUDS	PCD
WAM33	Trailer wheels	17.5"	10	225mm


19.5"

WAM 23 B - COMPLETE SET - INCLUDING FITTINGS

WAM Euroliners



2700419

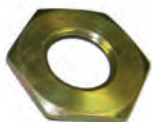

2700421



2700421



2700418



WAM TOL 04



SET	SIZE	STUDS	PCD
2700459	19.5"	8	275mm
Iveco Eurocargo - 80E 180 / M.A.N / Mercedes Atego - 917 / 1117 / 1120 / 1215-1528 / 1523 / 1524L / 1217 / 1223 / 1224 / Volvo B6 / Dennis Dart / DAF 55 / BMC Probus			

- 2x WAM23B FL (WAM Euroliner – Front) = 2700459A
- 2x WAM23B RL (WAM Euroliner – Rear) = 2700459P
- 8x WAMJM23 (Jam Nut & Cap) = 2700419
- 8x WAMSE05 (Stud Extender) = 2700491
- 4x WAMN023 (Half Nut – Rear) = 2700421
- 8x WAMBK23 (Bracket) = 2700418
- 1x WAMTOL04 (Fitting Tool)
- 4x WAM Logo2

AVAILABLE INDIVIDUALLY - FOR SPARE PARTS

SET	INFO	SIZE	STUDS	PCD
WAM34	Trailer wheels	19.5"	8	275mm

WAM 225 B STD - COMPLETE SET - INCLUDING FITTINGS

22.5"

WAM Euroliners




**COPRI DADO_NUT
INOX**



2700126



2700421

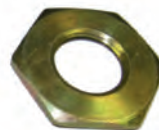

2700421



2700484



WAM TOL 01

SET	SIZE	STUDS	PCD
2700455	22.5"	10	335mm
KIT UNIVERSALE 22.5"-STD KIT FOR 22.5"			

- **2700455A** DISCO ANTERIORE + ACCESSORI MONTAGGIO
- **2700455P** DISCO POSTERIORE + ACCESSORI MONTAGGIO

22.5"

Axlecovers - COPRI MOZZO



AXLECOVERS™

Fissaggio sul mozzo ruota con 4 bulloni.

Materiale: inox 100%

Cerchi in acciaio

2700474 – (180mm H, D.fori 23mm)

2700476 – (280mm H, D.fori 23mm)

Cerchi in alluminio

2700475 – (180mm H, D.fori 32mm)

2700477 – (280mm H, D.fori 32mm)

22.5"

AXLEBOOTS

AXLEBOOTS™

Copri mozzo in inox

Axleboot – **2700473**



NON TROVATE IL KIT PER IL VOSTRO VEICOLO ???

AIUTATECI COMPILANDO QUESTO FORM CON I DATI MANCANTI,VI AIUTEREMO NOI AD IDENTIFICARLO !!!



Costruttore Modello Anno

No di assi No di ruote No ruote gemellate.....

Verificate cosa c'è scritto tra i dadi delle ruote anteriori, se sono visibili numeri e/o lettere copiatele nel box qui sotto (esempio 8.25 X 22.5)

Inserire qui le informazioni

INDICARE LE DIMENSIONI DELLA RUOTA

14 15 16 17.5 19.5 22.5 24.5

INDICARE IL NUMERO PRESENTI DEI PRIGIONIERI



3 4 5 6 8 10

Tipo di dado

("x" nel box)


Tipo 1

Dado svasato

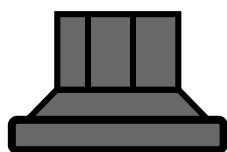


Tipo 2

Dado conico

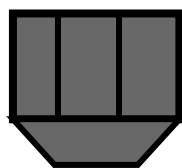

Lunghezza sporgente della filettatura

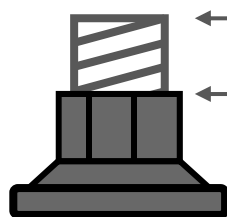

mm

ANT.

POST.

FILETTATURA " x "nel box

FILETTO FINE


FILETTO GROSSO

FILETTO SX

FILETTO DX

Qui trovate le informazioni sul pneumatico

Esempio 8.25 x 225

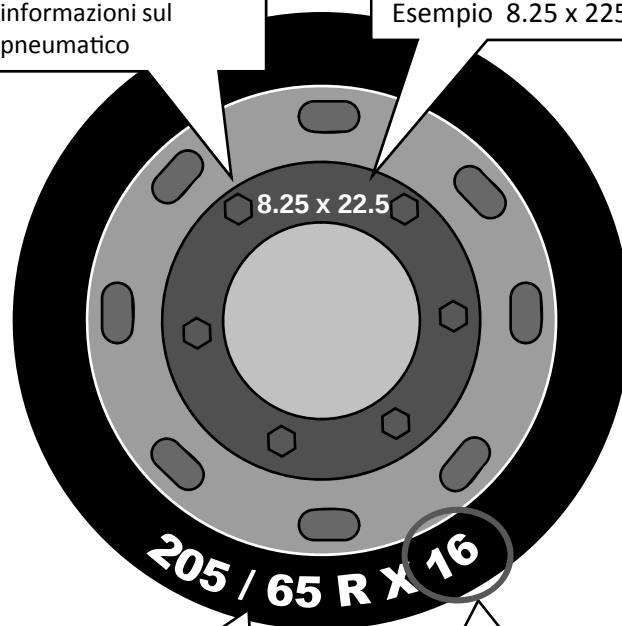


Dimensione pneumatico

Dimensione ruota

Rilevare dimensione tra due prigionieri opposti

P.C.D. interasse prigionieri

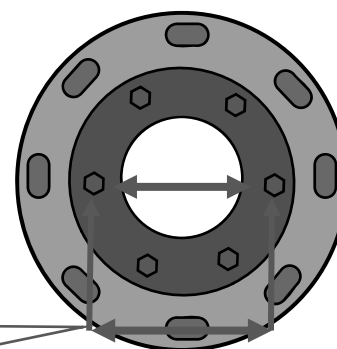

mm

Dimensione dei dadi



mm

RUGGINE NEI DISCHI EUROLINER



1. Euroliners™ sono realizzati al 100% in acciaio 304 e NON è possibile che si verifichino problemi di ruggine.
2. È sicuro al 100% che le possibili cause siano imputabili alle ruote, per fattori tra quali: errata equilibratura, fissaggio, curvatura, deformazione e cuscinetti
3. La ruggine deriva dall'acciaio dei cerchioni e dallo sfregamento del bordo dei cerchioni con i dischi Euroliners
4. Questo può succedere per diverse ragioni, bilanciamento del peso errato.
5. I cerchi-ruota in acciaio possono essere fuori equilibratura, facendoli quindi oscillare e vibrare e provocare polveri di sfregamento.
6. I cerchi-ruota in acciaio possono essere piegati o deformati, questo può provocare polveri e vibrazioni.
7. Gli Euroliners™ possono essere erroneamente installati, rimuoverli e rimontarli correttamente seguendo le indicazioni del libretto istruzioni.
8. Durante il fissaggio degli Euroliners™ applicare sempre un piccola quantità di grasso alle filettature dei fissaggi.
9. Nel caso sia visibile ruggine ai bordi degli Euroliners™ significa che non sono stati posizionati correttamente, sarà visibile una piccola parte molto logora sul bordo dei cerchi in acciaio, questo è provocato dalla pasta di ruggine che si è attaccata ai bordi degli Euroliners™.

Controllate TUTTE le possibili opzioni sopra indicate e risolverete il problema della ruggine al 99,9% !!

Nel caso necessitate di aiuto o maggiori informazioni non esitate a contattarci, ci rendiamo sin d'ora a vostra totale disposizione in qualità di rivenditori del marchio Euroliners™

Euroliners™ (stainless steel art for wheels)

#busknowledge



F.R.A. group

F.R.A. s.r.l. | head office | Via Sallustio 69 | Modena

F.R.A. ROMA s.r.l. | subsidiary | Via del Mare km 6 | 00040 | Pavona (ROMA)

www.fra.it